

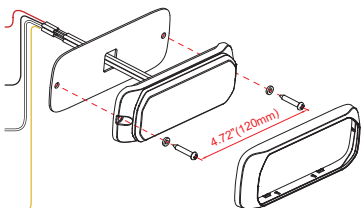
6LED WARNING LIGHTHEAD W/ HALO-RING™**WIRING**

To +VDC (Suggested Fuse Rating @ 2A).....**RED**:
Activate inner Warning Lamp in warning Flash Pattern

To Chassis -Ground:.....**BLACK**:

To +VDC (Suggested Fuse Rating @ 2A)...**WHITE**:
Activate outer Halo-Ring™ in Steady-burn

For Synchronization, Flash Pattern and Setting
(see operation).....**YELLOW**:

**OPERATION****For Warning Synchronization:**

Connect **YELLOW** wires of all lightheads together for synchronization.
(All lightheads should be set to the same Flash Pattern)

For Simultaneous or Alternating Warning Flash:

- Apply +VDC to **RED** (or **WHITE**) and **YELLOW** wires simultaneously to enter *Grouping Mode*; lighthead will display short (single or double) flashes:
 - Single flash = Group1
 - Double flash = Group2
- Remove **YELLOW** wire from +VDC then momentarily apply +VDC to **YELLOW** wire again to change Groups:
 - Lightheads of the same Group will flash together.
 - Lightheads of the different Group will flash alternately.
- Save and Exit *Grouping Mode* by powering off the lighthead.

For changing Warning Flash Pattern:

Momentarily apply +VDC to **YELLOW** wire:

- once to next pattern
- quickly three times to reset to FP#1

Note:

- All approvals based on actual model ordered.
- This product may not be factory-set at FP#1.

Warning Flash Patterns

| | | | |
|---|-------------------|----|-------------|
| 1 | Double [R65] | 8 | Quad [SAE] |
| 2 | Single [2Hz] | 9 | Quint [SAE] |
| 3 | Triple [2Hz] | 10 | Mega |
| 4 | Quad [2Hz] | 11 | Ultra [SAE] |
| 5 | Random | 12 | Single-Quad |
| 6 | Single [SAE/CA13] | 13 | Single H/L |
| 7 | Double [SAE] | 14 | Steady |