## MS6D 6LED+6LED DUAL COLOUR LIGHTHEAD

# 

#### For Synchronization:

Connect YELLOW wires of all heads together for synchronization (All heads should be set at the same Flash Pattern)

For Simultaneous or Alternating Flash:

- Apply +VDC to RED(or WHITE) and YELLOW wires simultaneously to enter Grouping mode; lighthead will display short (single or double) flashes:
  - Single flash = Group1
    Double flash = Group2
- 2. Remove YELLOW wire from +VDC and momentarily apply to +VDC to change Groups:
  - · Heads in the same Group flash together.
  - Group1 Heads alternate with Group2 heads.

For Flash Pattern, momentarily apply +VDC to YELLOW wire:

- once for next pattern
- quickly three times for reset to FP#1 (see flash pattern chart)

NOTE: This unit may not be factory-set at Flash Pattern #1


Flash Patterns			
1	Random	7	Quad (SAE)
2	Steady	8	Quint (SAE)
3	Single (SAE)	9	8-Flash (SAE)
4	Mega	10	Single-Quad
5	Double (SAE)	11	Single H/L
6	Triple (SAE)	12	Singe-Triple-Quint

# MS6D 6LED+6LED DUAL COLOUR LIGHTHEAD

#### Adhesive Mount


- Select a mounting location and clean the surface.
- Peel one side of the adhesive and apply to the lighthead base.
- Peel the other side of the adhesive and secure the head firmly to the surface.

NOTE: Optimum adhesive strength is achieved after 24hrs.

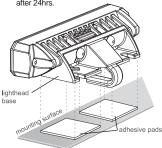

## **Screw Mount**

- 1. Select a mounting location for the lighthead.
- 2. Mark and drill mounting holes.
- 3. Place the rubber pad to the bottom of the base.
- Secure the head to the mounting surface with

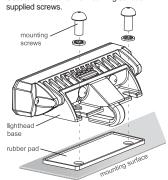

# **Bracket Mount**

- 1. Select a mounting location for the lighthead.
- 2. Place the rubber pad to the bottom of the base.
- 3. Place the head to the mounting surface.
- Align top holes of the bracket onto the lighthead base alignment points.
- Secure the head with supplied screws from the bottom of the bracket.

