

4-LED R65 LIGHTHEAD

12-24 VDC

WIRING

RED: To+VDC (fuse @ 1A)

BLACK: To Chassis Ground

WHITE: To +VDC for steady-burn

YELLOW: For Synchronization:

Connect **YELLOW** wires of all heads together for synchronization
(All heads should be set at the same Flash Pattern)

For Simultaneous or Alternating Flash:

1. Apply +VDC to **RED** and **YELLOW** wires simultaneously to enter Grouping mode; lighthead will display short (single or double) flashes:
 - Single flash = Group1
 - Double flash = Group2
2. Remove **YELLOW** wire from +VDC then momentarily apply it to +VDC to change Groups:
 - Heads in the same Group flash together.
 - Group1 Heads alternate with Group2 heads.
3. Power-off to save and exit setting.

For Flash Pattern:

momentarily apply +VDC to **YELLOW** wire:

- once for next pattern
- quick three times to reset to FP#1

FLASH PATTERN

1 Single (2Hz)

4 Quad (2Hz)

2 Double (R65)

5 All Steady

3 Triple (2Hz)

NOTE: This unit may not be factory-set at Flash Pattern #1