

# B16-REVO

## LED Rotating Beacon


160525B16-2



**WARNING:** Burn Hazard.  
Hot Surface Inside. Allow  
to cool before opening for servicing.




### 3 Bolt Mount

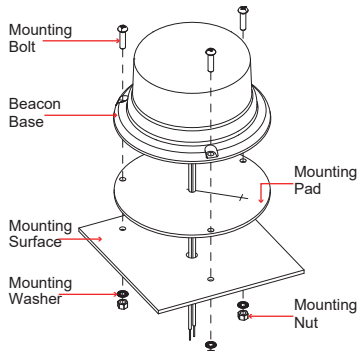


1. Drill holes on the mounting surface for the wire-exit and mounting bolts.
2. Secure the beacon onto the mounting surface with mounting bolts.

### Magnetic Mount

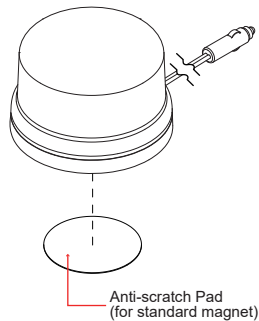

**WARNING:**  
It is not recommended to use magnetically mounted warning devices on outside of vehicle in motion. Usage is at the sole risk and responsibility of the user.  
(For moving vehicles, please use Power Mags)

### DIN Mount

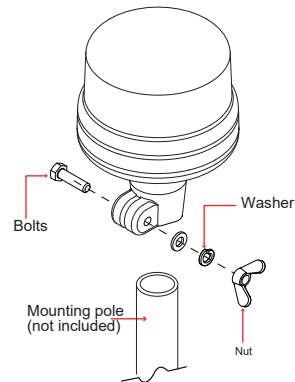

### WIRING

**RED:** To +VDC

**BLACK:** To Chassis Ground (-)

FP#	FLASH PATTERNS
1	Rotator [R65]