DUAL COLOUR LED BEACON!

WIRING / OPERATION

Permanent Mount:

BLACK: To -Chassis Ground

RED: To +VDC (fuse@5A) for Warning Mode in COLOUR1
YELLOW: To +VDC (fuse@5A) for Warning Mode in COLOUR2
(RED + YELLOW): To +VDC (fuse@5A) for Warning Mode in COLOUR1 alt. 2

WHITE: [+] for Low Power Operation

Activate dimming function by continuously applying +VDC to WHITE wire.

Magnetic Mount:

NOTE: Plug the cigar plug into the cigar lighter socket for Warning Mode in COLOUR1.

BUTTON 1 - Maintained Switch:

Position 1 - ON (Low Power Warning Mode)
Position 2 - OFF (High Power Warning Mode)

BUTTON 2 - Momentary Switch:

Press once - Switch to COLOUR2
Press again - Switch to COLOUR1 alt. 2
Quick press three times - Switch to COLOUR1

FLASH PATTERN SELECTION

1. Open

Twist the dome lens counter clockwise \triangle , then lift the dome lens to open.

2. Change


While activating Warning Mode, momentarily push the RED BUTTON (3) to change to the next flash pattern. (see Flash Patterns Chart)



Note: All COLOUR1, COLOUR2 and COLOUR1 alt. 2 warning modes may select different Flash Pattern.

3. Close

Twist and tighten the dome lens clockwise **6** to close.

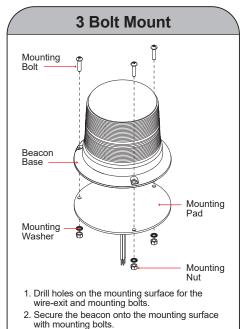


Magnetic Mount Power Plug (Actual cigar plug type and cable type base on the model ordered.) Anti-scratch Pad (for standard magnet) WARNING: It is not recommended to use magnetically mounted warning devices on outside of vehicle in motion. Usage is at the sole risk and responsibility of



Note: i. This unit may not be factory-set at FP#1 ii. Actual approval base on the model ordered.



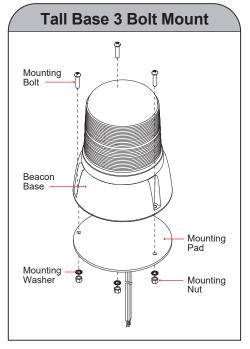

Note: All diagrams may not show to scale.