


## WIRING & FUNCTIONS (F4-SP)

### LIGHTBAR WIRING

Different applications require different functions. It is highly recommended to determine and configure the required functions prior to Installation; (refer to 'CONTROL CABLE' section).

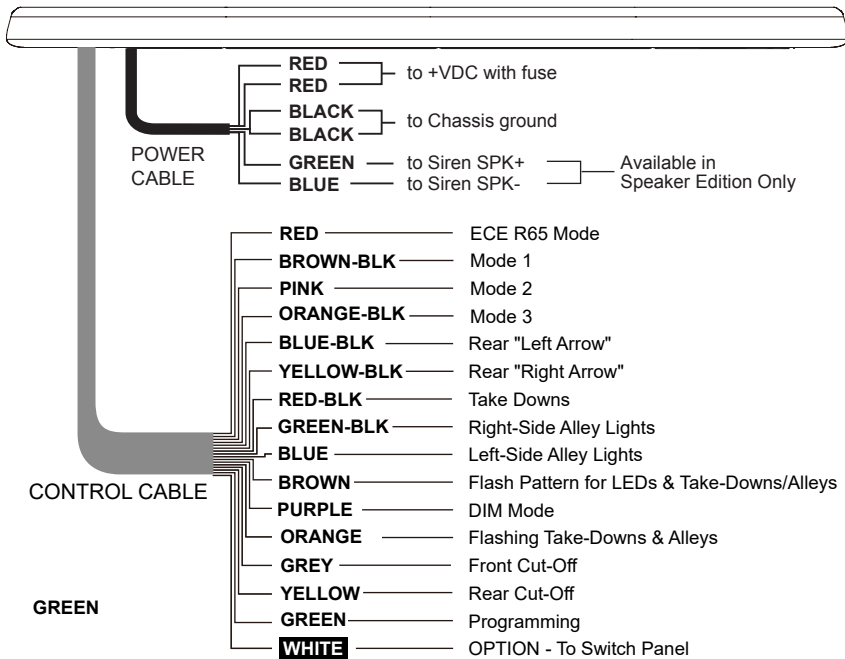

NOTE: Middle Section lights are independently switched and are not part of R65 Approval.

# User Manual

2021

## Cell2 LTD

Unit 4 Premus, Coldharbour Way,  
Brunel Park, Aylesbury, HP19 8AP  
England

[ LONDON ] **0044 (0) 2033 285 494**  
sales@cell2.com



[www.cell2.com](http://www.cell2.com)